

## Assembly/Repair Instructions Data Sheet

# Vinyl Nosing

### For use on the following NOTRAX<sup>®</sup> products:

- #083 - Standard Beveled Nosing

Vinyl nosing gives carpet entrance matting a factory finished appearance and reduces trip hazards.

### Getting Started

- 1) Cut the length of nosing required for the corresponding mat edge. Scissors or a sharp utility knife work well for cutting.

If you are repairing damaged nosing, using a straight edge carefully trim off the damaged nosing being careful not to cut the carpet. Again using a sharp utility knife works best. Clean the back of the mat where the new nosing will be applied, allow it to dry completely.

- 2) Place the nosing on the floor, flat side down (See Figure 1.)
- 3) Apply 2 continuous beads of adhesive liberally to the flap of the nosing. Place mat on nosing and press in place with moderate pressure (See Figure 2.)
- 4) After applying the nosing, placement of weight on the entire edge will help assure maximum bond between the mat and nosing.
- 5) Allow to dry for 8 hours or overnight. The mat can then be returned to service.

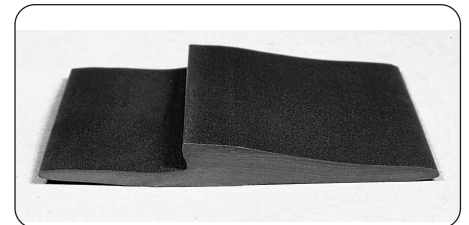


Figure 1



Figure 2



*Note: We recommend the use of our #86 adhesive, or a fast-acting, resin glue, (i.e. Super Glue, Crazy Glue, etc.) to bond the vinyl backed mats to the nosing.*